

STORMWATER MANAGEMENT FACILITY (PONDS) OPERATION & MAINTENANCE SCHEDULE

ROUTINE MAINTENANCE:

1. The party responsible for maintenance of the facility shall inspect it biannually and after major storms. Inspections should be performed during wet weather to determine if the pond is functioning properly.
2. The embankment of the pond consisting of the outside side slope, the top and inside side slope shall be mowed a minimum of once per year to control woody vegetation. To control grass and noxious weeds, mow twice per year, once in late June and once in September. Other side slopes, pond bottom and maintenance access are to be mowed as needed.
3. Debris, trash and litter shall be removed during regular mowing operations or as deemed necessary.
4. No woody vegetation (trees, shrubs, brush, etc.) is allowed within a 25 foot radius of the pond principal spillway inlet control structure or on and within 25 feet of the manmade embankment.
5. Burrowing animals are to be removed from the manmade embankment area and the burrows backfilled.
6. Visible signs of erosion along the inflow channels, within the pond and at the outfall shall be repaired immediately.

NON-ROUTINE MAINTENANCE:

1. Structural components of the pond such as the embankment, riser, barrel, weir, etc. shall be repaired immediately upon detection of damage.
2. Periodic cleaning, recoating, welding, etc. of the pond trash rack, riser, barrel, low flow dewatering device, etc. immediately upon detection of a problem.
3. Sediment shall be removed when the accumulation significantly reduces the design storage, interferes with the function of the riser or when deemed necessary for the proper operation of the facility.